


AgroJoy

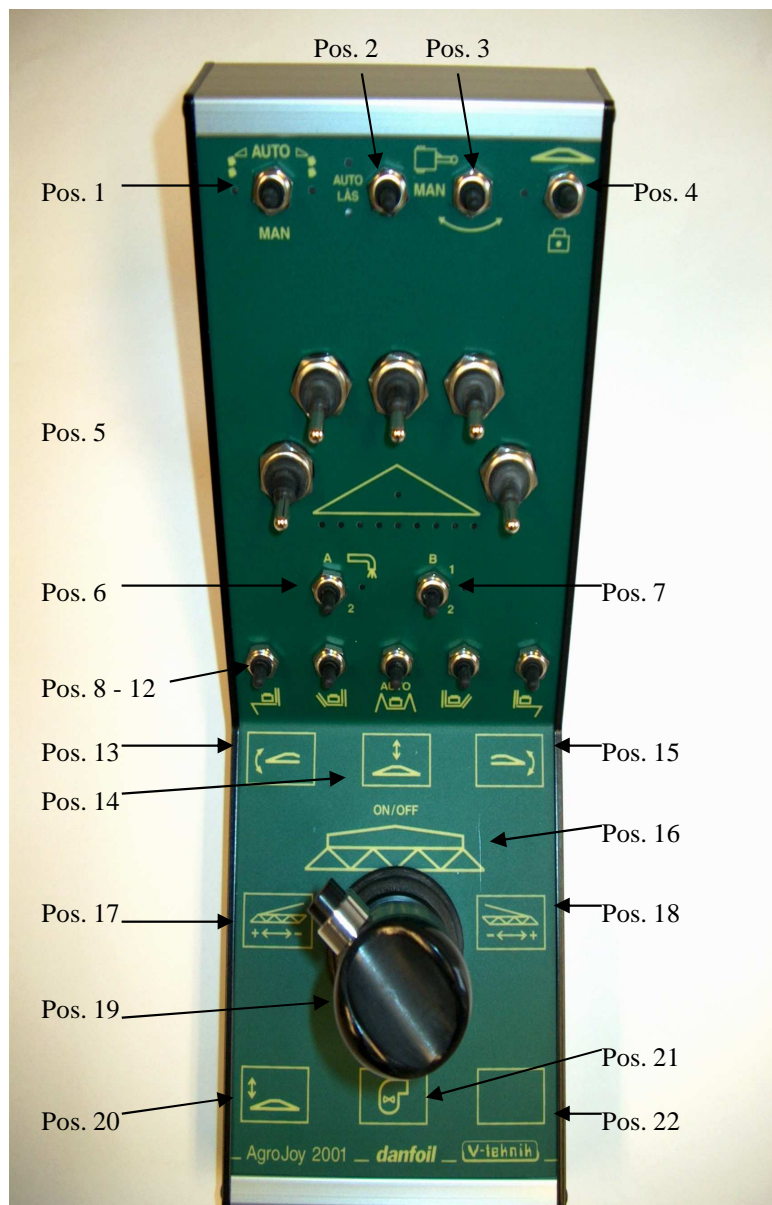

Pos. 1 Skum, Auto: skifter selv ved vending
Neutral: ude af drift, Man: manuel skift

Pos. 2 Ikke aktiv

Pos. 3 Ikke aktiv

Pos. 4 AutoTilt on / off

Pos. 5 Delbredder, kontroller at alle lamper er tændt

Pos. 6 1. Rentvandspumpe aktiveres til gennemskyl af bom. Hovedpumpe skal være slukket
2. Blæser aktiv ved sprøjtning

Pos. 7 1. Kun hvis der er højtryksrenser (ellers overtryk)

Pos. 8 Hyd. funktion yderbom

Pos. 9 Hyd. funktion inderbom

Pos. 10 Alle funktioner samtidig ved ind- og udfoldning

Pos. 11 Hyd. funktion inderbom

Pos. 12 Hyd. funktion yderbom

danfoil AirBoss

Pos. 13 Individuel bomløft

Pos. 14 Hæve / sænke funktion

Pos. 15 Individuel bomløft

Pos. 16 Tænd / sluk bom - midterstilling

Pos. 17 Bom sektioner slukkes og tændes med henholdsvis øverste eller nederste knap på joysticket

Pos. 18 Se pos. 17

Pos. 19 Når joysticket føres til given position tryk på henholdsvis øverste eller nederste knap


Pos. 20 Tilt til korrekt bomføring

Pos. 21 Luftindstilling

Pos. 22 Ikke aktiv

- ved smal transportbredde skal pos. 9 og 11 benyttes

AgroJoy

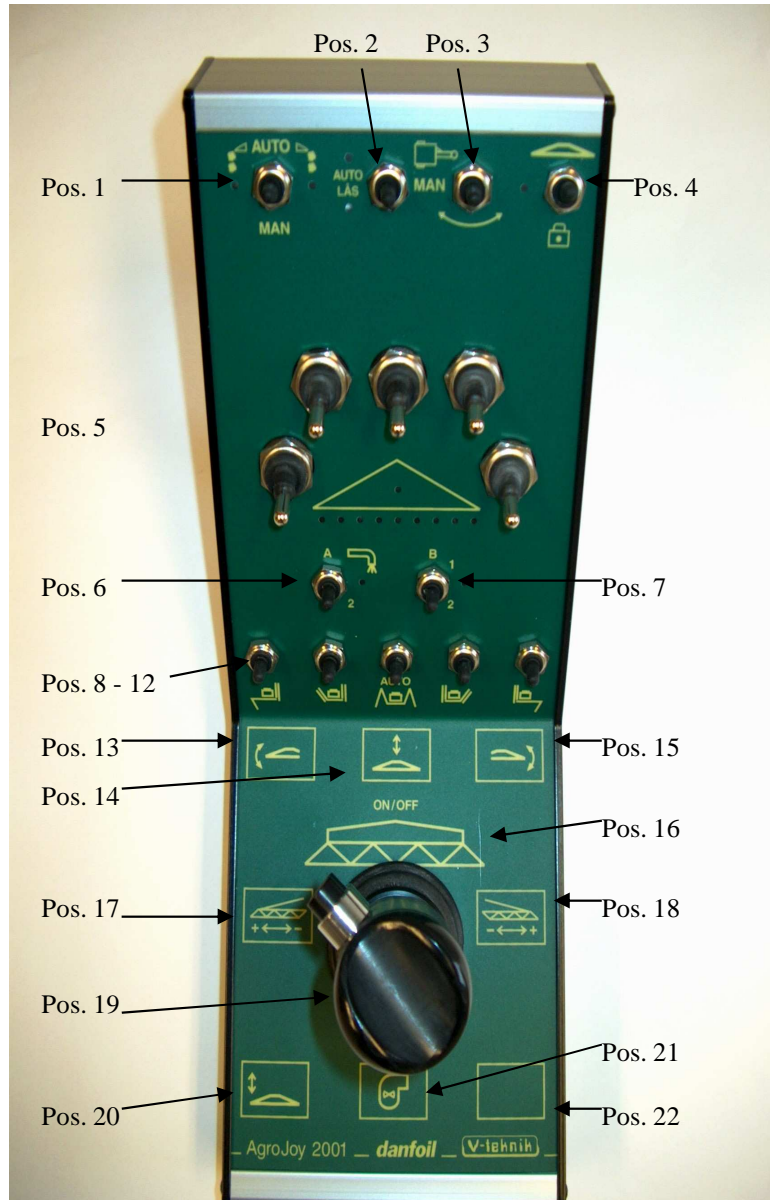

Pos. 1 Foam, Auto: changes side spray on/off
Neutral: not in use, Man: manuel shift

Pos. 2 Ikke aktiv

Pos. 3 Ikke aktiv

Pos. 4 Auto slant control on / off

Pos. 5 Sections light indicate section is on

Pos. 6 1. Clean water pump activated
Neutral: Fan is not activated
2. Fan activated with spraying

Pos. 7 1. Highpressure on (Option)
Neutral: Guide always active
2. Guide in SP mode

Pos 8 Left Hydraulic outer boom section

Pos 9 Left Hydraulic inner boom section

Pos 10 All boom functions at once

Pos 11 Right Hydraulic outer boom section

Pos 12 Right Hydraulic inner boom section

danfoil AirBoss

Pos. 13 Individual boom lift

Pos. 14 Boom up/Down

Pos 15. Individual boom lift

Pos 16. Turn sprayer on/off master section switch

Pos. 17 From Left: Boom sections off and on with
top and bottom button respectively

Pos. 18 From Right: Boom sections off and on
with top and bottom button respectively

Pos. 19 Joystick used to activate functions by
pressing top or bottom button

Pos. 20 Slant control

Pos 21 Adjust Air up/Down

Pos. 22 Not Actove